User Manual

1. Brief Introduction---------- 4

2. Attention----------4

3. Ready to use----------5

3.1 Packing list----------**5**

3.2 Product----------**5**

3.3 Button introduction----------**5**

3.4 Features----------**6**

4. Quick Guide----------7

4.1 Power on/off---------- **7**

4.2 Battery and charging----------**8**

4.3 Icon used----------**8**

5 Operation----------9

5.1.1 Media Player----------**9**

5.1.2 Photo, Video Player----------**10**

5.1.3 Recorder----------**11**

5.1.4 FM----------**11**

5.1.5 File Management----------**12**

5.1.6 IE Explorer----------**13**

5.1.7. Dial----------**13**

5.1.8 Contact----------**14**

5.1.9 Info----------**15**

5.2.0 Use TF Card----------**15**

5.2.1 APK installment and uninstallment----------15

5.2.2 Camera----------15

5.2.3 Time setting----------16

6. System setting

6.1.1 WIFI setting----------16

6..1.2 3G Internet----------17

6.1.3 Bluetooth----------18

6.1.4 Display setting----------18

6.1.5 Location Services----------19

6.1.6 Apps----------20

6.1.7 Backup and reset----------21

6.1.8 Storage----------21

6.1.9 Language & input----------21

6.2.0 Date and time setting----------23

6.2.1 About Tablets----------24

6.3 Icon setting----------24

6.3.1.Icon delete and add----------24

6.3.2 Wallpaper setting----------26

6.3.3 Small Icon----------27

1. Brief introduction

Respect users:

Thank you for your purchase and use of our products. For your security and interest, read the product instructions and all attached data before using it. If you don't operate the product in accordance with product instructions, resulting in any personal injury, property or other losses, the company will not responsible for that.

2. Attention

1. LCD maintenance:

Don't put any heavy goods on the tablet

Please make sure that you haven't put too many things in the bag or besides the device when using suitcase or backpack

Don't grasp, twist or impact the surface of the LCD

Don't put LCD in environment beyond 40 degree or humidity over 90%

Don't expose LCD in the direct sunlight or strong fluorescent

Please don't use corrosive cleaning agent to clean LCD to avoid any damage.

3. Please don't take the case apart when the system is working or datas would be damaged, even lost. Please copy those important files by yourself timely, especially, before you decide to format the disks.

4.Please only use the power adapter we enclosed in the device package.

5.Only the authorized people of our agency can assemble or disassemble the device, please prevent the seal from any damage for after-sales service.

3. Ready to use

3.1 Packing list

Description	Q’ty
Tablet PC	1
AC Adapter	1
USB Cable	1
User manual	1
Warranty card	1

3.2 Product

3.3 Button introduction

Position	Definition	Function instruction
A	Button	Press for more than 3 sec to Power on/off , press for 1 sec to stand by.
B	Button	Volume increase/decrease
C	Camera port	Back camera
D	Port	SIM card port
E	Port	Micro SD card port, Reset
F	Port	Recorder Port
G	Port	USB Port
H	Port	Earphone port
I	Camera	Front Camera
J	Speaker port	speaker

3.4 Features

- ✧ **MTK6577 Chipset, Cortex A9, 1Ghz, Dual Core,**
- ✧ **Support 1GB DDR3**
- ✧ **8 Internal Flash, up to 32GB trough SD CARD**
- ✧ **7inch (1024*600) IPS Screen,**
- ✧ Support **AVI,MPEG4,FlV,AVI,MKV,3GP,TS.H.264, MPEG4, H.263, DivX, Xvid,VC-1** format video play。
- ✧ **Support** JPG、JPEG、BMP、GIF、PNG、JFIF etc format image
- ✧ **Suppot MP1、MP2、**MP3、WMA、WAV、OGG、OGA、APE、FLAC、AAC、M4A、3GPP **format,**
- ✧ **Support e-reader** TXT、LRC、PDF、Html、Htm、EPUB format
- ✧ **Support recorder**
- ✧ **Support 3G internet**
- ✧ **Support G-sensor for roatation**
- ✧ **Support FM receiver**
- ✧ **Support GPS function**
- ✧ **Support stereo earphone and speaker**
- ✧ **Support multi language**
- ✧ **Support USB disk**

Specification:

Dimension	193.7*122.6*10.7mm	
Weight	322g	
LCD	Size	7inch
	Resolution	1024*600
PC jack	USB port，USB 2.0 Device	
CPU	ARM Cortex A9 1GHz。	
Internal memory	Flash Memory ： 8GB	
Flash	SDRAM 1G DDR3	

Up to volume	Suppot TF_Card，1GB~32GB	
Power	3.7V/3000mAh Li polymer, DC5V Adapter	
Music function	Play format	MP3,WMA,WAV,OGG,AAC,APE
	MP3 bitrate	8Kbps ~ 392 Kbps
	Support WMA、WMV bitrate	5Kbps ~ 192 Kbps
	Frequency	20Hz~20KHz
	Noise	90dB
Video function	Format	AVI,MPEG4,FlV,AVI,MKV,3GP,TS.H.264, MPEG4, H.263, DivX, Xvid,VC-1
	Max resolution	1920*1080
	Display mode	4：3、16：9、Full screen
Image	JPG,PNG,BMP	
E-reader	Format	TXT、LRC、PDF、Html、Htm、EPUB
	Mass storage	5M
WIFI Function	Chipset	MT6620-S500
	Speed	Max54Mbps
	Distance	Max100m
	Frequency	Dual 2.4GHz/5GHz 802.11n
FM	Receiver frequency	87.5~108.0MHZ
Recorder	WAV format recorder	
Working tempreature	-10~+70°C	
OS	Windows2000/XP/WIN7/Vista Mac OS V9.0/10.0	

4 Quick Guide

4.1 Power on/off

Power on and unlock：Press “Power” for 3 sec to power on, press and slide to , the device will be unlocked：

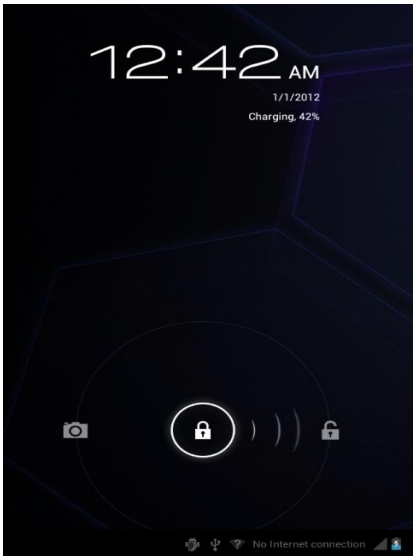

Save mode and unlock：choose “Display” in setting, choose closed after 15sec and device will be sleep after 15 sec and be locked.

Power off： press Power button for 3 sec, choose ok to power off device.

Attention: Please reset device or press Power button for 6sec to cut off when no reaction.

4.2 Battery and charging

a. Please charge for 4-8hrs at first-time used。
b. Connect AC adapter with device and will be charged as , stand for full battery.
c. Please charge for 1min at least and start device when no power

4.3 Icon used

a . Definition

Icon	Function	Icon	Function
	Back to Menu		USB debug
	System info		USB Connected
	Back		WIFI Connected
	Menu		Bluetooth Connected
	Related programme		Battery
	Time		Signal strength

5 Operation

5.1.1 Audio Player

Press to enter music player,

Choose your favorite music to play music

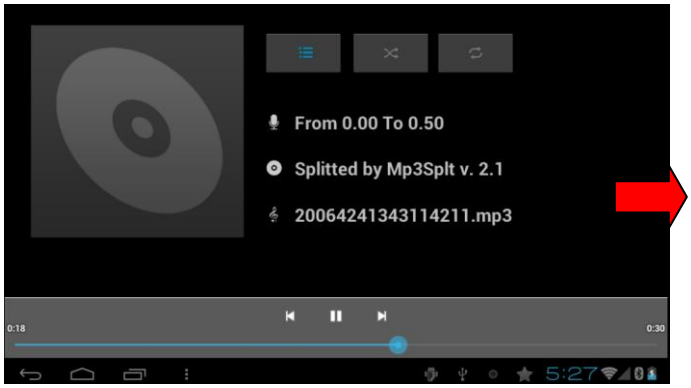

- Press to enter music list
- Hold to fast play
- Button instruction：

Button	Instruction	Button	Instruction
	Artist		Personal music
	Song Name		Play list
	Current play		Random play
	Repeat all music		Repeat single music
	Previous		Next
	Play		Pause

5.1.2 Video Player

Press to enter photo/video player：

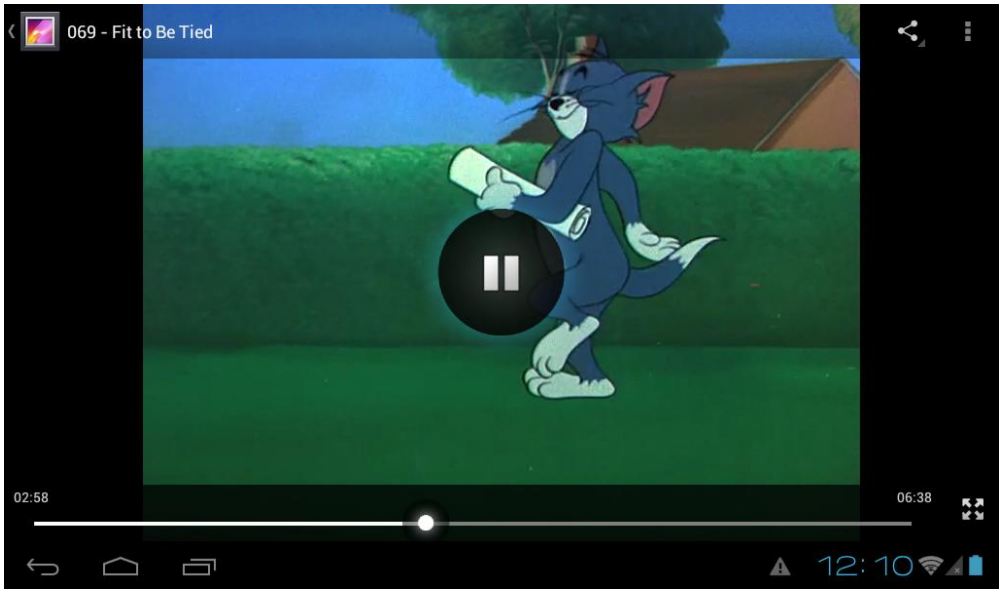

Press to back main menu。

Hold to choose chapter，press to exit。Press to pause

Video format support：AVI,MPEG4,FlV,AVI,MKV,3GP,TS etc。

- Photo format support：JPG,PNG,BMP etc。

5.1.3 Recorder

Press to enter recorder menu, press to start record。Press to pause。

Press to play record content。

Play: press to open record file

5.1.4 FM Receiver

Press to enter FM Receiver

Button	Instruction	Button	Instruction
	Channel list		Search channel
	Menu setting		Increase/decrease frequency for 0.1MHZ
	Play/pause FM		Channel switch。

5. 1. 5 **File management**

Press to enter file management

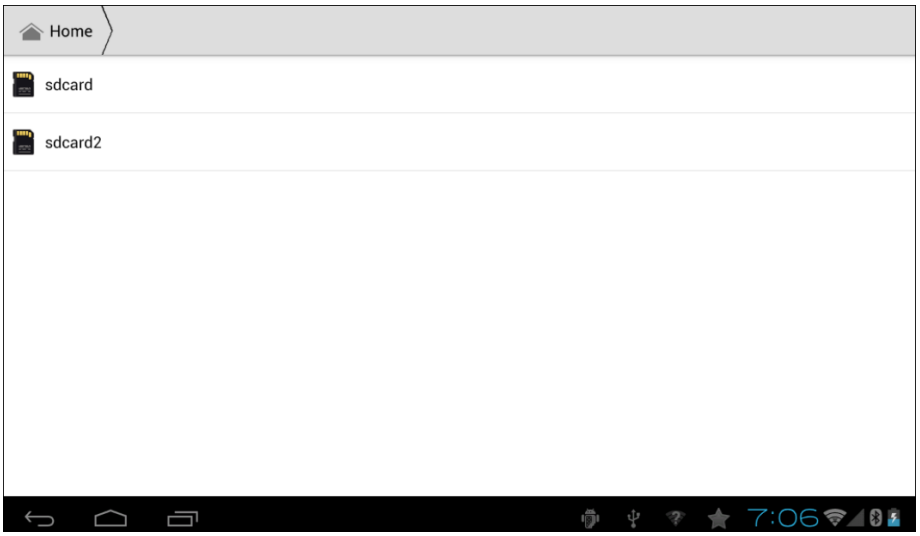

New file folder File rank Edit

5.1.7 Dial

- Press to enter dial menu:

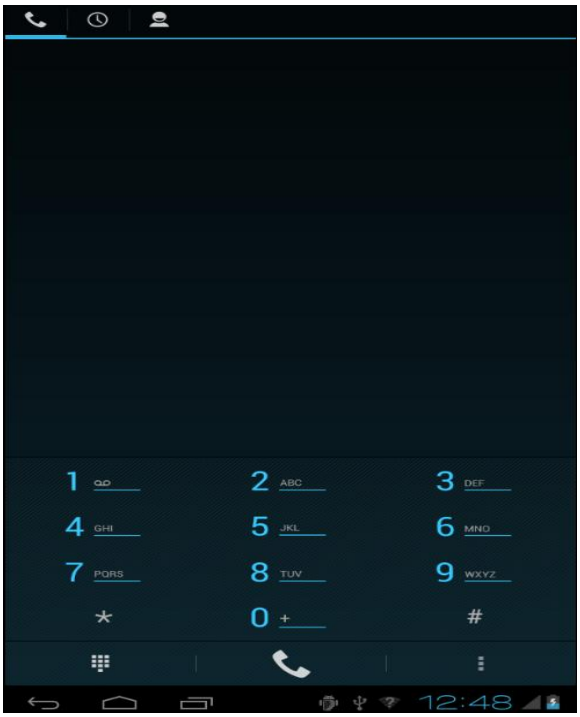

Dial number while insert SIM card. to start keyboard Dial button， Setting button， Dial record Phonebook

★Attention: 3G phone call function will be used when SIM card insert. Please power off and insert SIM card, then power on to open 3G function.

5.1.8 Contact

Press to open contact list:

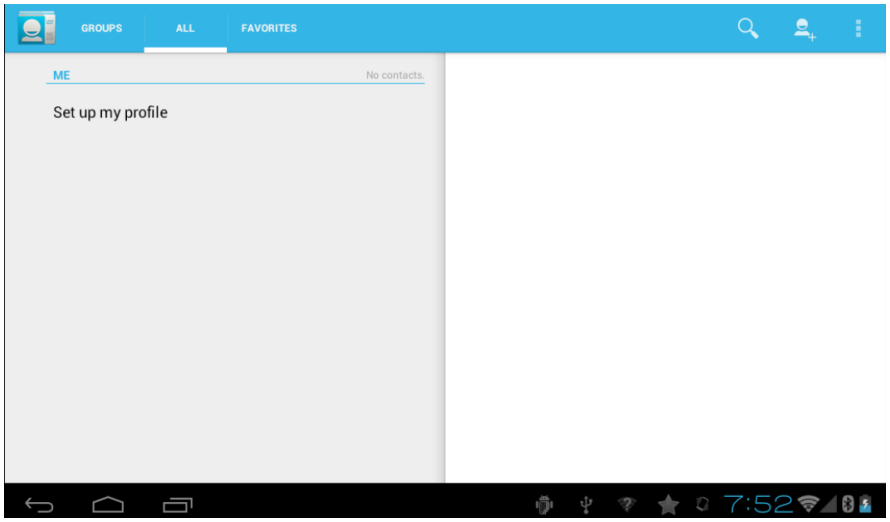

5.1.9 Info:

Press to enter info menu.

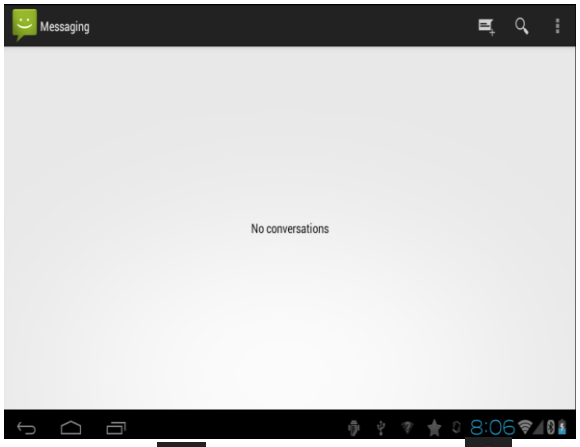

New message Research message setting menu

5.2.0 Use TF Card

b. Please insert TF card into slot and device will read it.

5.2.1 APK Installment and uninstallment

Download apk file from internet and copy into flash, choose ok for installment.

Uninstallment: press management, press apk which you will uninstall for a while, move apk icon and wait for change to red

5.2.2 Camera

Press to enter camera interface：

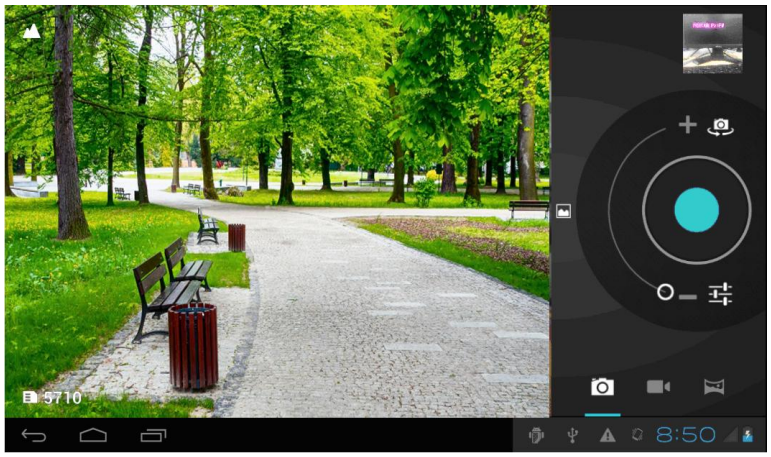

Camera switch setting shutter shoot video focal length

5.2.3 Time setting

press to enter time setting：

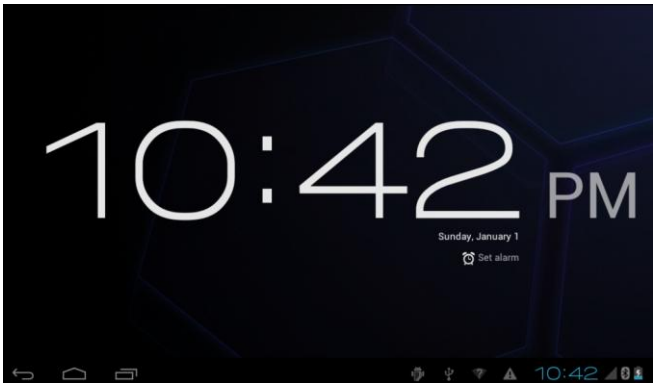

press 

to set alarm

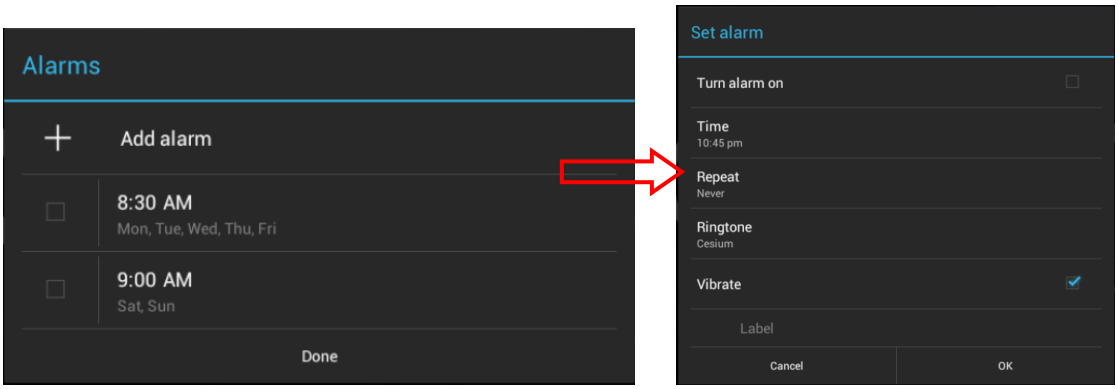

6 System setting

6.1.1 WIFI setting:

press to enter setting menu and open WiFi function:

a. internet:

choose one link and enter your password, then press connect:

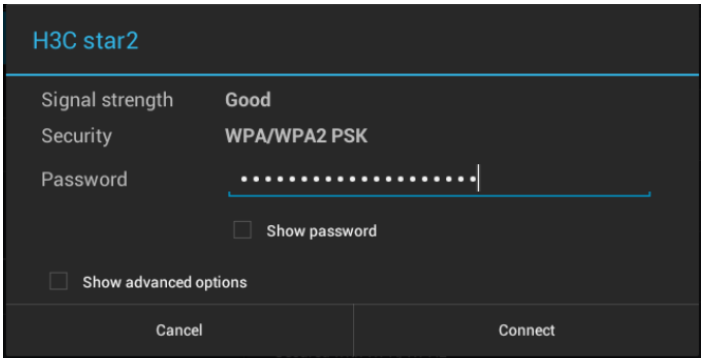

Such as

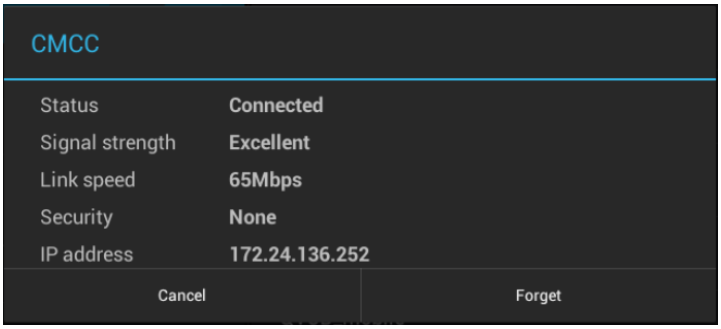

will be show in main menu after WiFi connected.

6.1.2 3G internet:

Close WiFi and press more, choose Mobile networks:

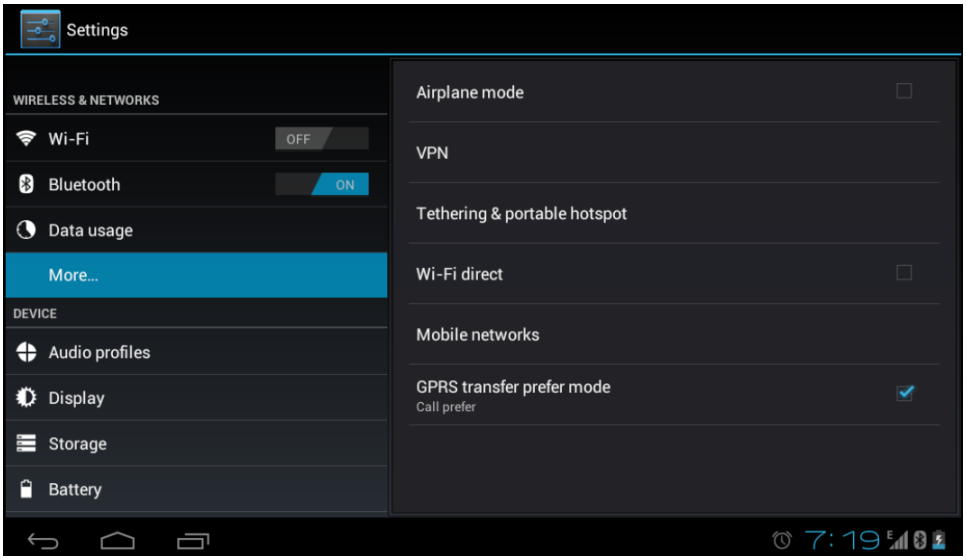

Press networks and enter into settings：

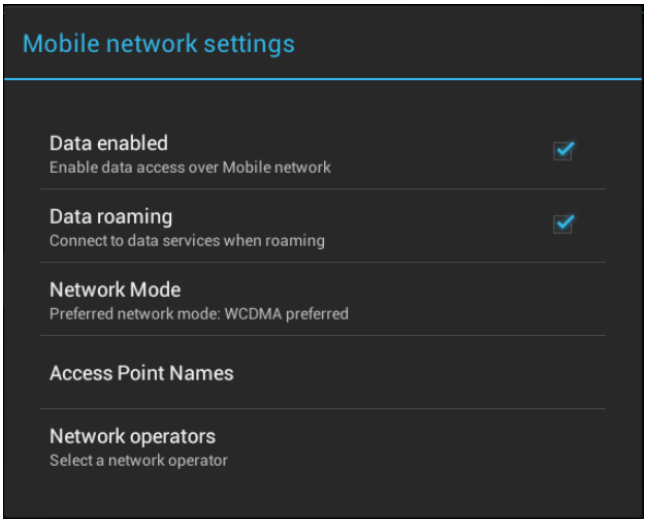

★Attention, 3G function will be available after insert SIM card

6.1.3 Bluetooth：

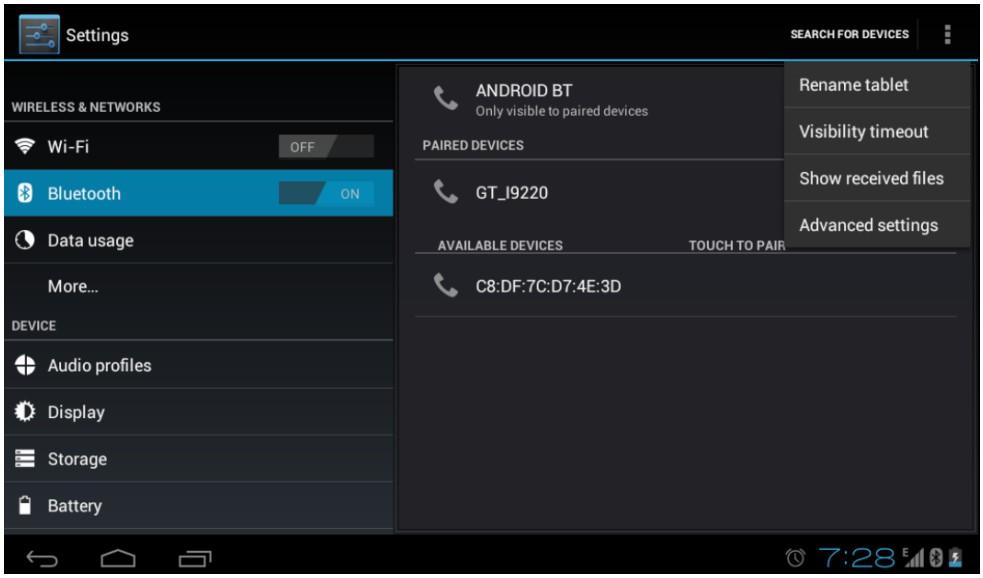

Open Bluetooth and choose your favorite link, enter password to connect with mobile

Or choose SEARCH FOR DEVICES to search manually。press to enter Bluetooth advanced setting.

6.1.4 Display setting：

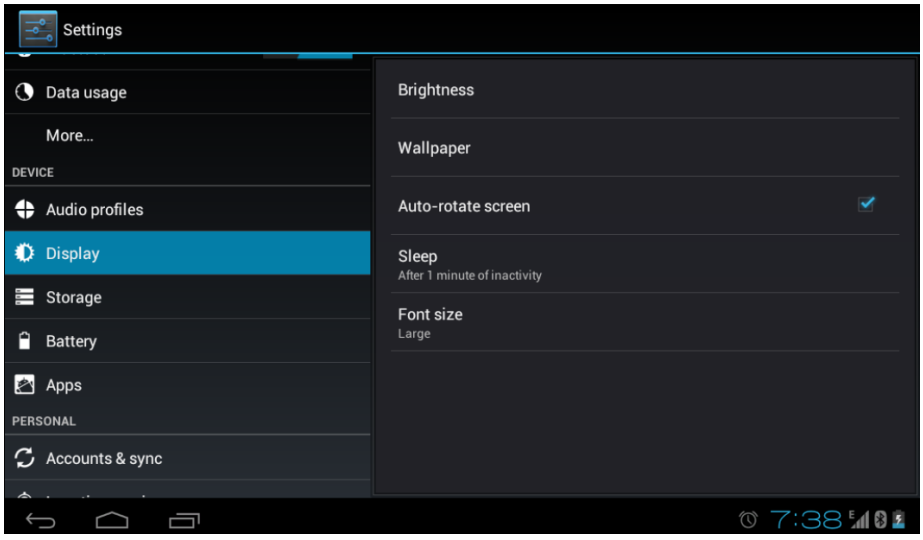

Brightness, wallpaper and auto-rotate screen can be set in display setting. choose to open auto-rotate screen。

6.1.5 **Location services**

press【 】to enter location services：

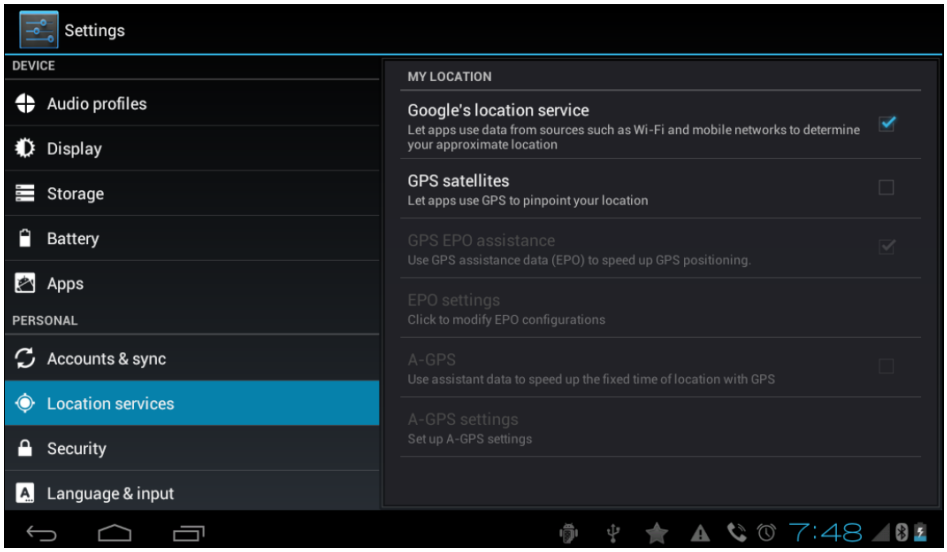

press

to enter security interface：

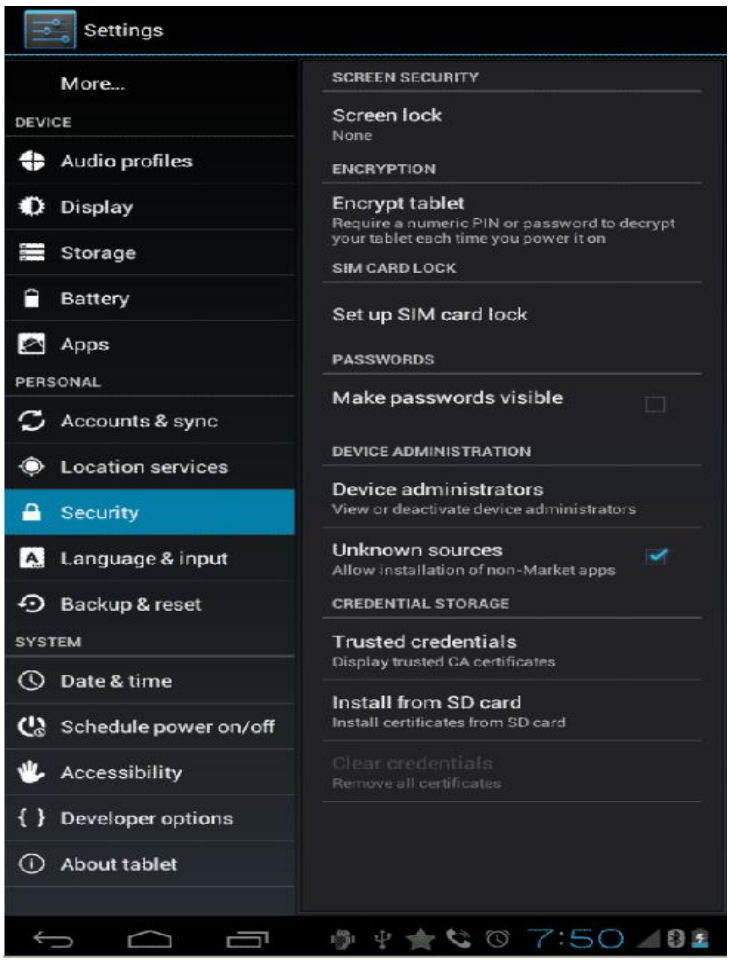

6.1.7 Backup and reset

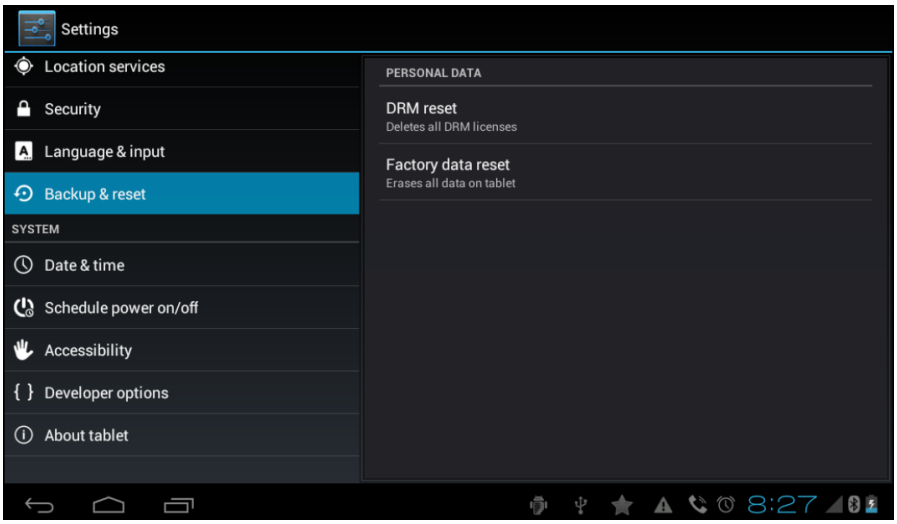

6.1.8 Storage

Press storage to enter setting interface, USB storage、total space etc will be show on screen

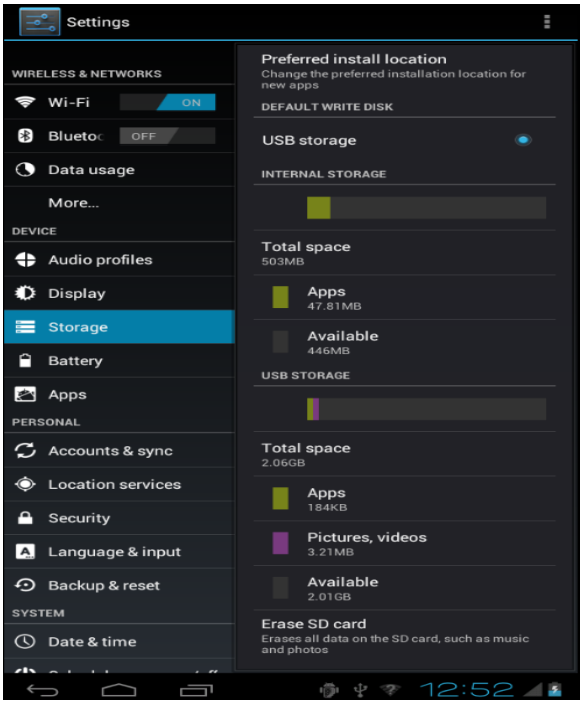

6.1.9 Language & input

Enter language & input to choose language：

- **Android keyboard settings：**

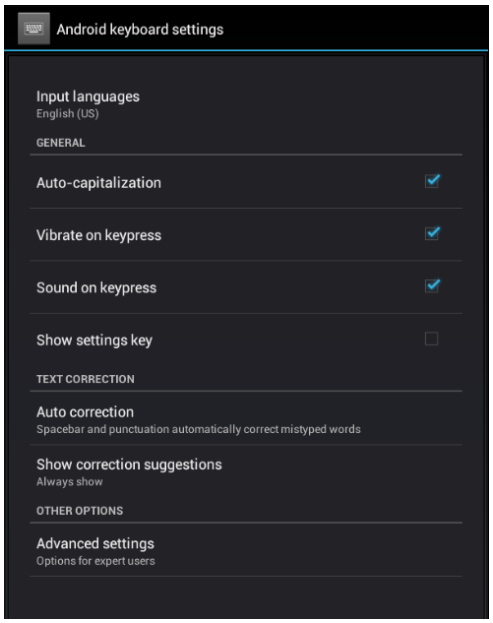

6.2.0 Date and time setting

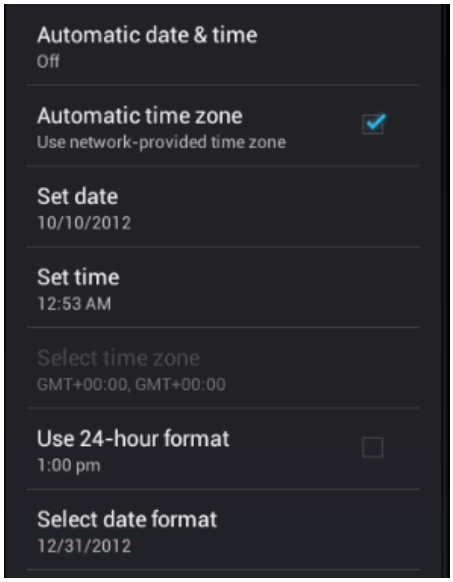

- **Date setting:**

  press to set and press Set for ok

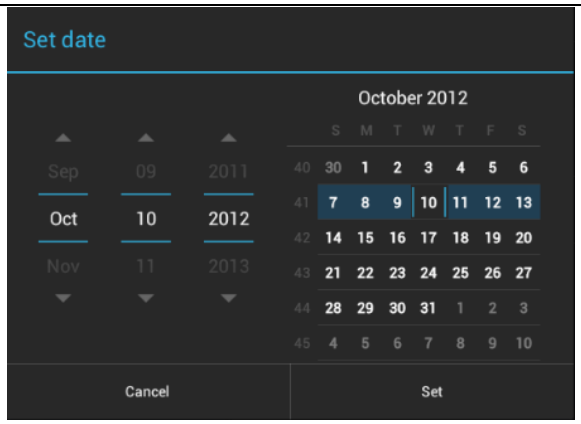

- **Time zone setting：**
  Choose your favorite time zone：

- **Time setting：**

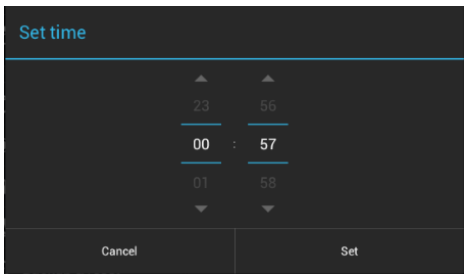

- **Select date format：**

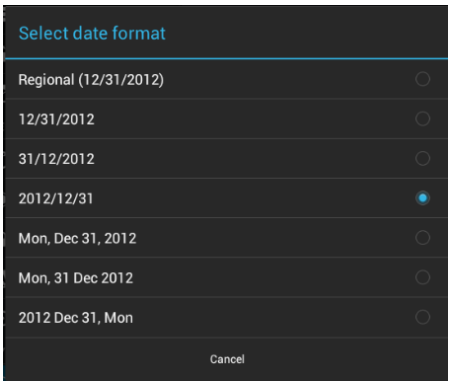

6.3.3 Small icons

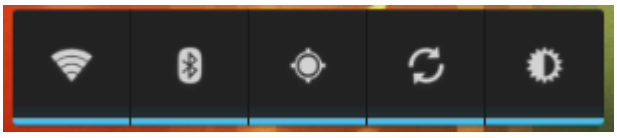

WiFi. Bluetooth GPS updated Brightness

is open， is closed

When brightness change to , auto brightness is open.